
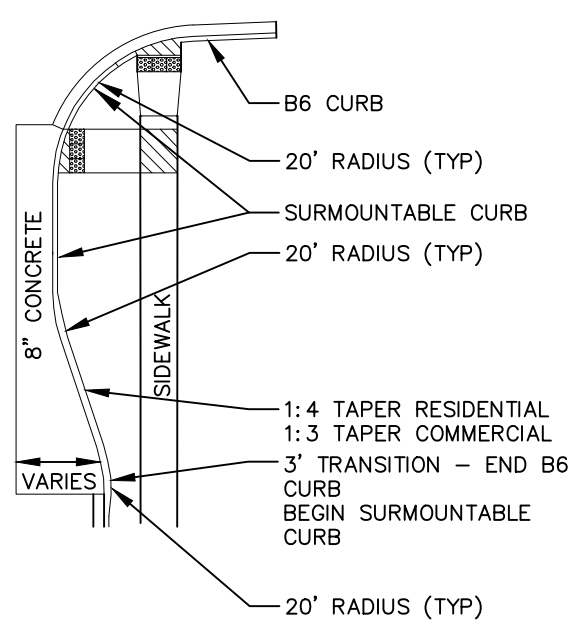
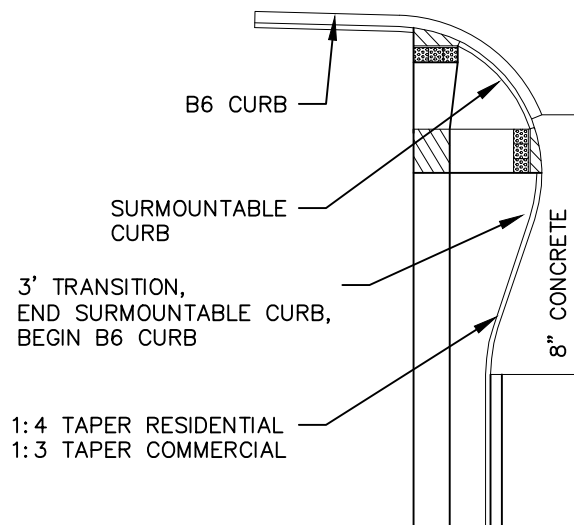
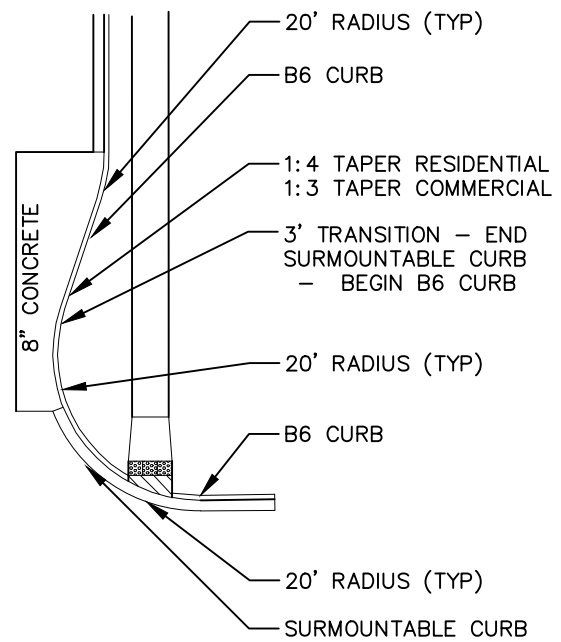


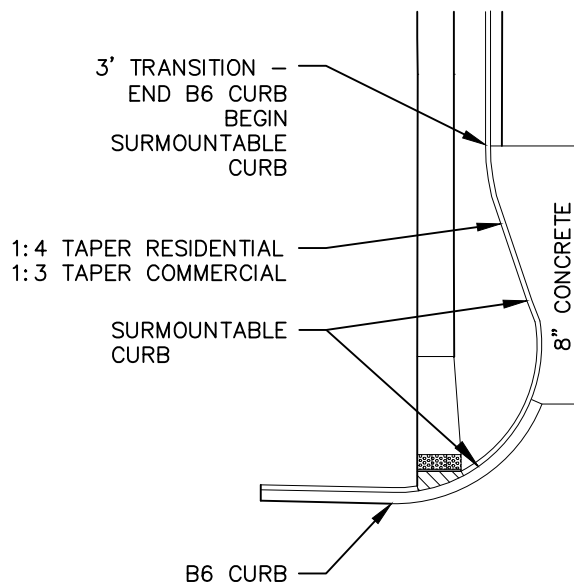

NOTES:

1. ALL BUS STOPS MUST PROVIDE A 5' WIDE BY 8' DEEP ADA CONCRETE PAD (LESS THAN 2% SLOPE IN ALL DIRECTIONS).
2. IF BACK OF CURB IS LESS THAN 3.5' FROM SIDEWALK, FILL AREA WITH 6" CONCRETE.
3. DOWEL CURB INTO 8" CONCRETE USING #4 REBAR SPACED 30" ON CENTER.
4. CONCRETE TO BE MNDOT 3F52 MIX DESIGN WITH TARGET 6.5% + 2% -1.5% AIR CONTENT.
5. MEMBRANE CURING COMPOUND SHALL BE CLEAR TK2519 DCWB, AMS 3754 CLEAR OR APPROVED EQUAL.