


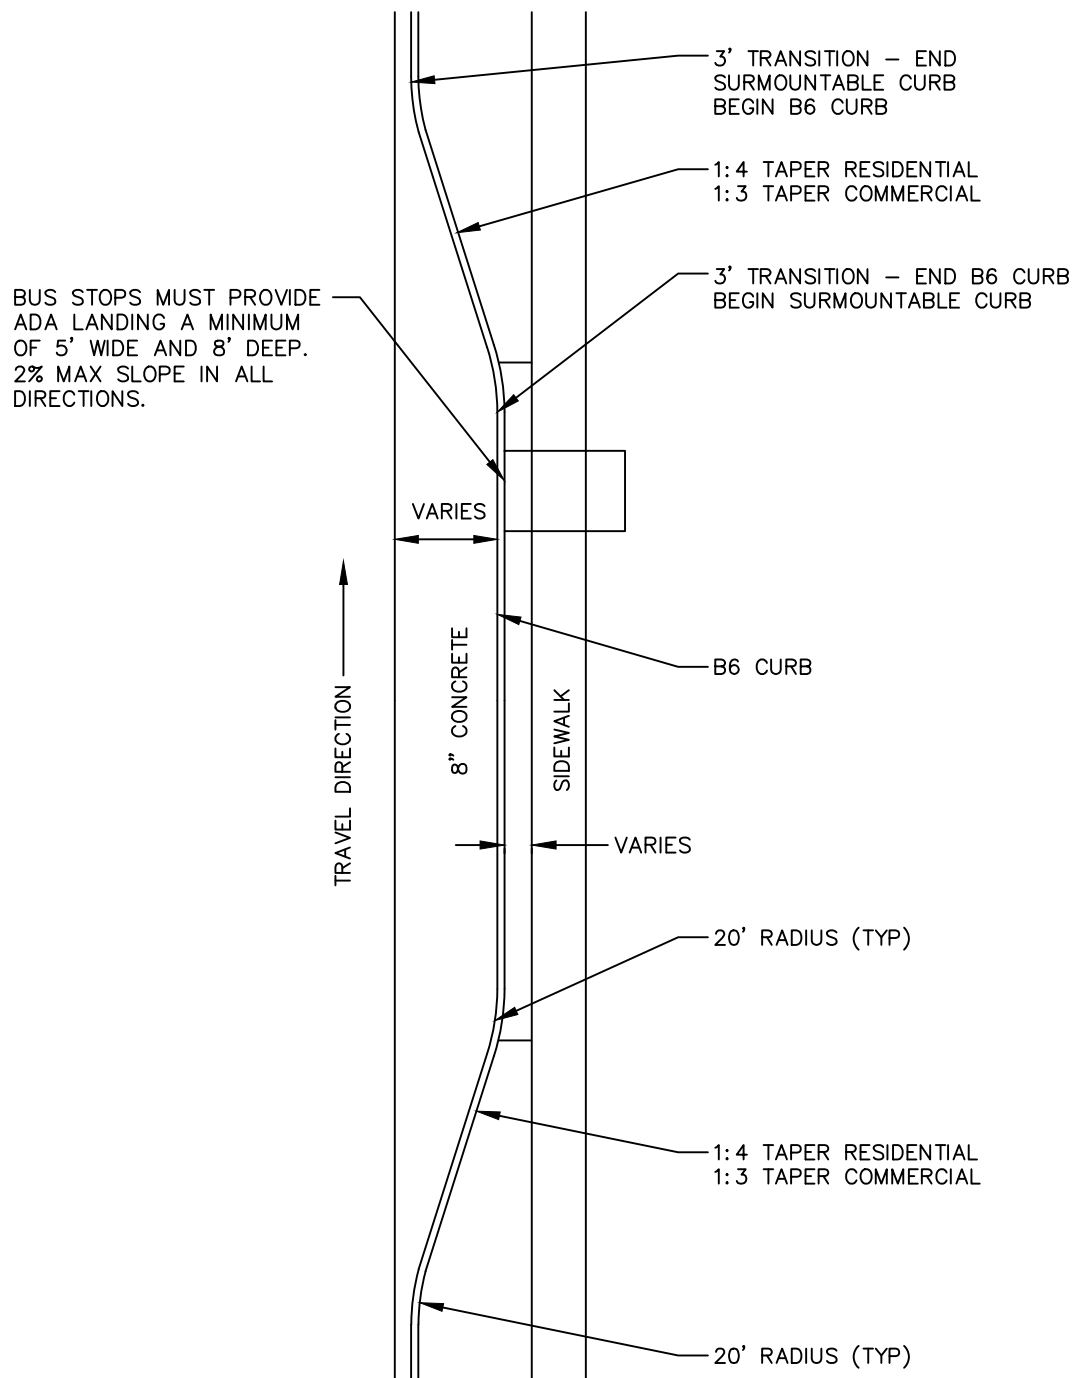

NOTES:

1. LENGTH OF BUMPOUT VARIES BY LOCATION.
2. IF BACK OF CURB IS LESS THAN 3.5' FROM SIDEWALK, FILL AREA WITH 6" CONCRETE.
3. DRAIN STORMWATER TOWARDS CURB TO MINIMIZE NEED FOR VALLEY GUTTERS.
4. DOWEL CURB INTO 8" CONCRETE USING #4 REBAR SPACED 30" ON CENTER.
5. CONCRETE TO BE MNDOT 3F52 MIX DESIGN WITH TARGET 6.5% + 2% -1.5% AIR CONTENT.
6. MEMBRANE CURING COMPOUND SHALL BE CLEAR TK2519 DCWB, AMS 3754 CLEAR OR APPROVED EQUAL.